


## Typical detail:

### Existing solid wall

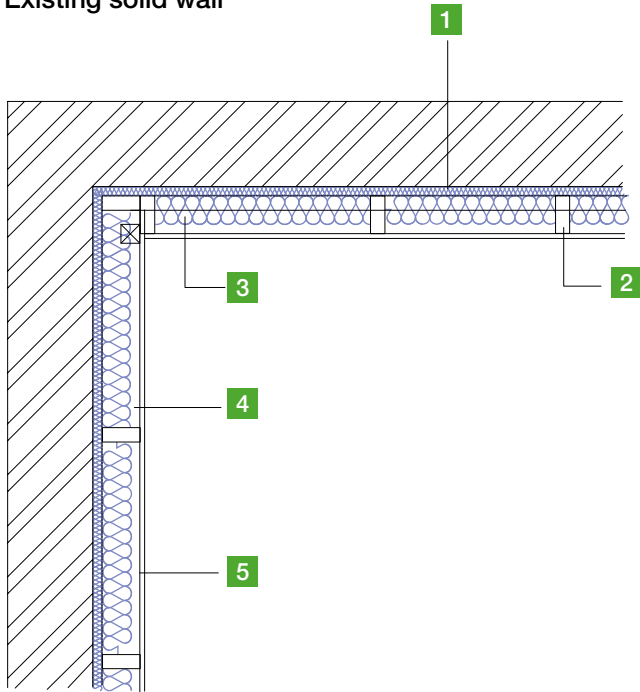

1. 25mm WALLTITE behind studwork
2. Treated timber studs set off by wall by brackets
3. WALLTITE CL100 insulation between and behind studwork to achieve target U-value
4. Unventilated air space
5. 12.5mm vapour check wallboard and skim finish

At corners of internal and external walls to rooms, set frame to external wall back from corner a minimum of 25mm and set batten to line with vapour check wall boarding to receive board end to internal wall.